



CONGRATULATIONS!!

You have just purchased a new Trimlight permanent lighting system.

The following guidelines will help you get to know your system better and understand how to operate and maintain your new Trimlight EDGE system.

**SCAN THE FOLLOWING QR CODE TO DOWNLOAD THE APP DIRECTLY TO YOUR DEVICE.
ACCEPT ALL PERMISSIONS WHEN PROMPTED**

Understanding the WiFi System and Application

Your new Trimlight EDGE system can be downloaded to multiple devices but it is important to remember that the system can only be connected and controlled from one phone or device at a time. You can download the application through your device's application search function. Simply go to your Apps search bar and download the app titled: Trimlight

Your system can be controlled via the wifi network that is internally broadcasting or be connected to your local home or business wifi network.

Using the Trimlight App!

The following 3 pages explain each section of the application for simple understanding of how to control your Trimlight EDGE system

Return to Controller List
This icon allows the user to return to the main controller page to access more controllers.

Pre-Set Programs
There are 180 default programs within this dial. Simply drag a finger around to see the many different default modes. The outside ring with differing colors shows separation of different categories. The name or description of the pattern is located on the top of the screen

Brightness and Speed
These icons will allow the user to adjust the brightness of the diodes or speed of the movement for any pattern that is found within this page.

Sequencing Spacing
This slider bar allows a user to alter the quantity of sequencing in the chosen pattern.

Custom Patterns

Settings
Access for Controller Settings

Individual Scroll
Using the side arrows allow the user to incrementally scroll through each pattern throughout the dial.

Reverse Direction
This icon allows any of the patterns to reverse direction.

Categories
Simple categories for easy access to favorite default patterns. Simply touch any of the categories and it will automatically place the dial at the first pattern in the category.

Add to Library
Use this button to save one of the default patterns to an event or favorite for future reference.

Music Function

Calendar and Favorites