




Frieze Board Installation

For areas that have a frieze board that hangs lower than the soffit and can be made from Metal, Fiber Cement Board, Painted Wood, or Stained wood. Our “Deck Channel” is best. This channel has a small lip that is bent inside the channel to allow for multiple installation options.




How this installs...

1. Align the channel against the frieze board or to the location in which you desire to mount it. The back of the deck channel becomes the face of the system faced outward. In this application, a “back cover” may not be needed unless it is visually desired.

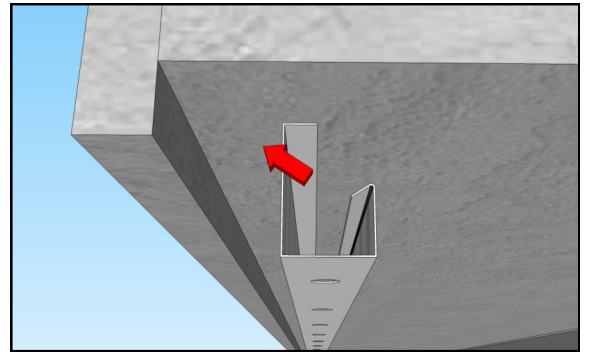

2. In order to attach the channel to the surface there are two common methods; 1. Use a screw through the back of the channel (As shown in diagram) penetrating into the frieze board. 2. Use a screw going vertical passing through one of the diode holes in the channel and penetrating through the lip of the channel on the top. And anchoring into the structure above.

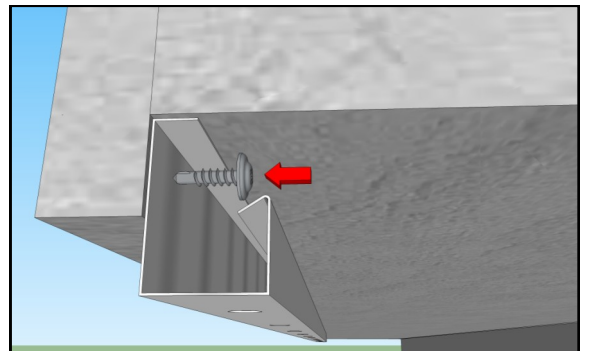

Before attempting option #1. Ensure the screw is of proper length to not protrude through the face of the frieze board.

Once the Trimlight channel is secured, you are now free to install the diodes and electronics.